




Nissan Leaf
Type: ZE2, 5-door SUV
(2026-)

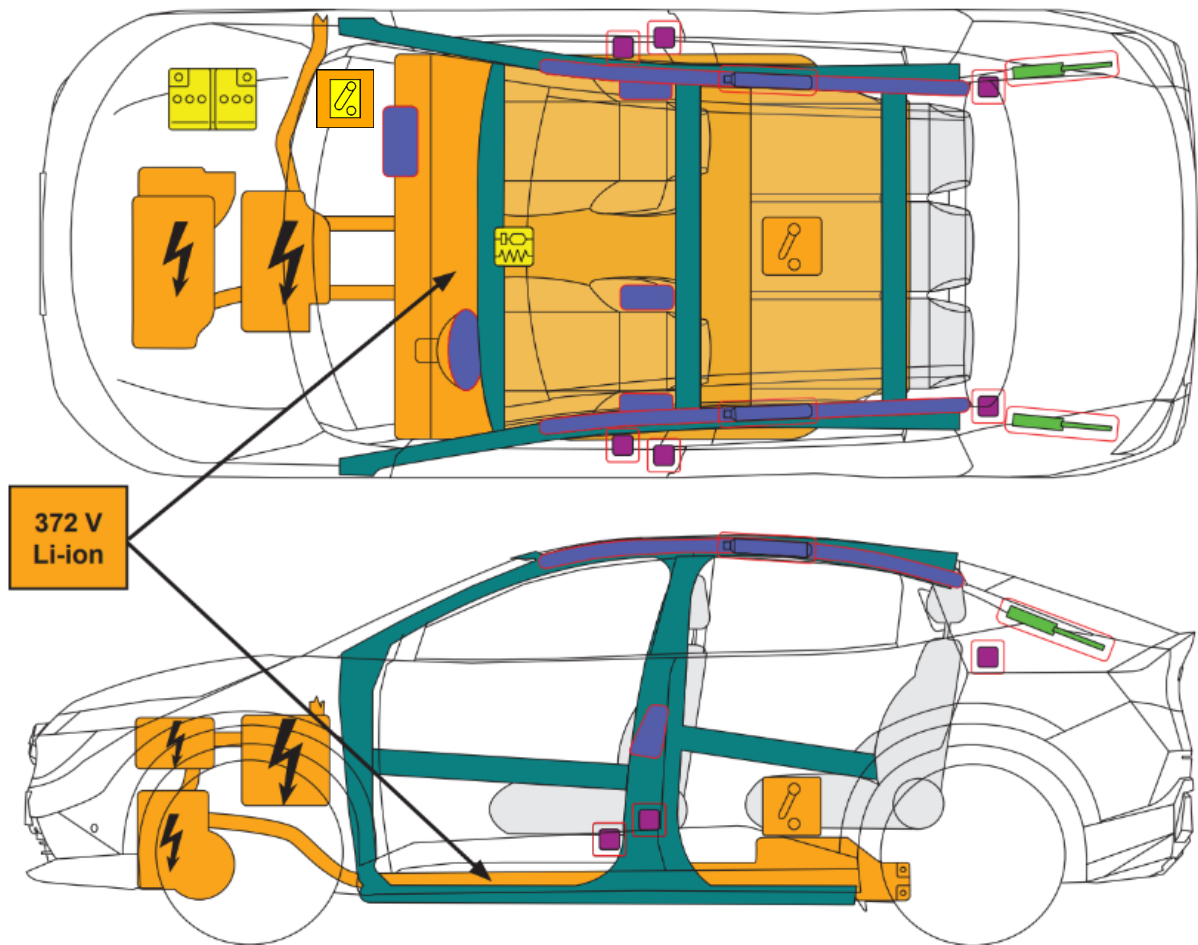

Airbag	Stored gas inflator	Seat belt pretensioner	SRS control unit	Battery low voltage
Gas strut/preloaded Spring	High strength zone	High voltage device that disconnects high voltage	High voltage component	Battery pack, high voltage
High voltage power cable	Low voltage device that disconnects high voltage			

Nissan Leaf: ZE2, 5dr SUV (2026-) – Additional Pages

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

Brand Logo

Model name

Charge Port





2. Immobilisation / stabilization / lifting

Immobilise vehicle:

1. Block wheels
2. Apply parking brake
3. Push the P (park) button to select the P (park)

Lifting points:

- Appropriate lifting points
- High voltage battery
- Do not lift zone

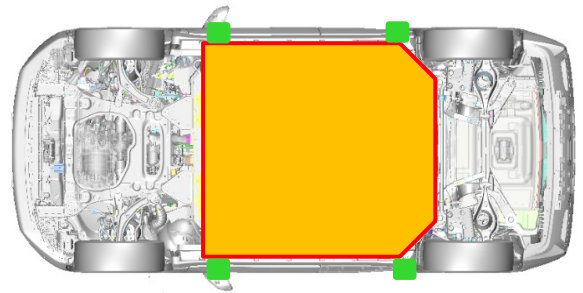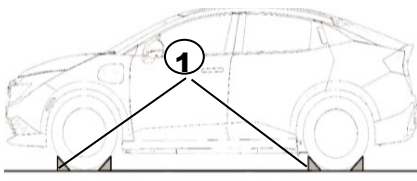


3. Disable direct hazards / Safety regulations



In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active.


MAIN DISABLING METHOD - Turn OFF the power

If the “Ready” indicator in the instrument cluster is illuminated press the Start/Stop button once. Then the high voltage system is disabled. Then, remove the electronic key and keep at least 16 ft. (5 m) away from the vehicle.





ALTERNATIVE DISABLING METHOD 1 - Remove Service Plug

Disable the high voltage system by removing the disconnect switch located under rear centre seat. Use class 0 insulating gloves.

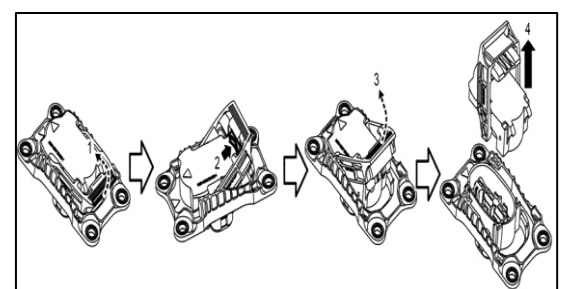




ALTERNATIVE DISABLING METHOD 2 - Disconnect 12V Battery

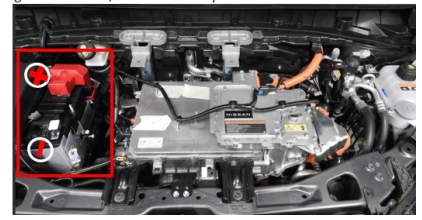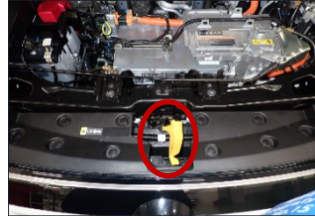

ALTERNATIVE DISABLING METHOD 3 - Cut of the engine bay label

Cut off both ends of the first responder label located on the left side of the motor room when viewed from the front of the vehicle

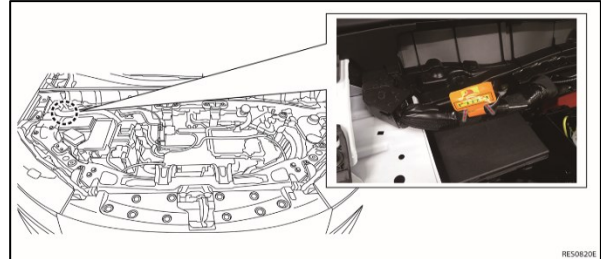


Safety instructions:

Never touch, cut, or open any orange high voltage power cable or high voltage component!

4. Access to the occupants

Steering column adjustment

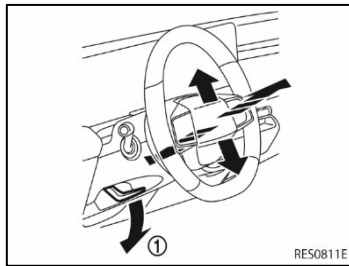

Seat adjustment (electric)



Seat adjustment (Manual)




Glass types







- A. Laminated glass
- B. Tempered glass

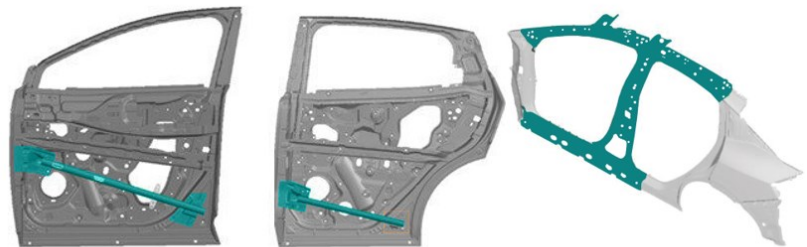

High strength steel in body and door

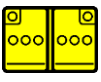


5. Stored energy / Liquids / Gases / Solids

 Li-ion	Lithium-ion 372V	
	12V	
	R-1234yf 550 ± 25 g	



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.



6. In case of fire



USE LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



Responders should always protect themselves with Personal Protective Equipment (PPE), including a Self-Contained Breathing Apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident.



If warning messages displayed in dashboard “Battery thermal runaway evacuate vehicle to safe area outside car” – Evacuate Vehicle



GAS STRUT, RISK OF MISSILE EFFECT



7. In case of submersion


There is no increased risk of electric shock in water resulting from the high voltage system
If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

8. Towing / transportation / storage



Recovery hook storage



Location front hook

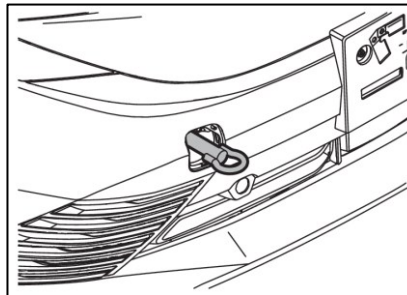

Location Rear hook

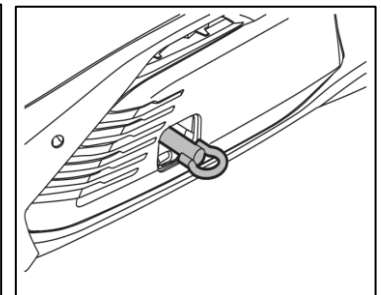

STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE $\geq 5M$ FROM OTHER OBJECTS OR VEHICLES!

POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



10. Explanation of pictograms used

	Remove smart key		Electric vehicle
	Warning, Electricity		Flammable
	General warning sign		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Corrosives
	Use thermal infrared camera		Bonnet
	Seat adjustment, longitudinal		Boot
	Seat height adjustment		Steering wheel, tilt control